

shop.shift74.ru

Shift Computers

Блок питания 19V 3.42A Toshiba OEM

900 шт.



Блок питания:

Входное напряжение: AC 100-240V

Выходное напряжение: DC 19V (19.5V)

Выходной ток: DC 3.42A

Мощность: 65W

Диаметр штыря: 2.5 mm

Длина штыря: 5.5 m

Высота: 12 mm

Блок питания для:

TOSHIBA

Toshiba Satellite A105 Series: A105 / A105-S101 / A105-S1012 / A105-S1013 / A105-S1014 / A105-S101X / A105-S171 / A105-S1712 / A105-S171x / A105-S2001 / A105-S2011 / A105-S2021 / A105-S2031 / A105-S2051 / A105-S2061 / A105-S2071 / A105-S2081 / A105-S2091 / A105-S2101 / A105-S2111 / A105-S2121 / A105-S2131 / A105-S2141 / A105-S2194 / A105-S2201 / A105-S2204 / A105-S2231 / A105-S2236 / A105-S271 / A105-S2712 / A105-S2713 / A105-S2716 / A105-S2717 / A105-S2719 / A105-S271X / A105-S361 / A105-S3611 / A105-S361X / A105-SP2012 / A105-SP461 5-SP461 Toshiba Satellite A100 Series: A100-151 / A100-163 / A100-188 / A100-209 / A100-259 / A100-295 / A100-500 / A100-507 / A100-508 / A100-521 / A100-522 / A100-523 / A100-525 / A100-533 / A100-570 / A100-649 /

A100-S2211 / A100-S2211TD / A100-S3211TD / A100-S8111 / A100-S8111TD / A100-SP2022 /
A100-SP621 / A100-ST2311 / A100-ST3211 -ST3211 Toshiba Satellite A110 Series: A110-101 / A110-177 /
A110-178 / A110-203 / A110-260 / A110-289 / A110-339 / A110-370 Toshiba Satellite A130 Series: A130 /
A130-ST1311 / A130-ST1313 Toshiba Satellite A135 Series: A135 / A135-S2246 / A135-S2256 /
A135-S2266 / A135-S2276 / A135-S2286 / A135-S2296 / A135-S2306 / A135-S2326 / A135-S2346 / A135-
S2356 / A135-S2376 / A135-S2386 / A135-S2396 / A135-S4407 / A135-S4417 / A135-S4427 / A135-S4437 /
A135-S4447 / A135-S4457 / A135-S4467 / A135-S4477 / A135-S4478 / A135-S4487 / A135-S4488 / A135-
S4499 / A135-S4517 / A135-S4527 / A135-S4656 / A135-S4677 / A135-S4827 / A135-SP4016 /
A135-SP4036 / A135-SP4048 / A135-SP4058 / A135-SP4088 / A135-SP4108 / A135-SP4156 Toshiba
Satellite A200 Series: A200-10W / A200-10X / A200-10Z / A200-11C / A200-12F / A200-13L / A200-13O /
A200-13R / A200-13T / A200-13U / A200-14D / A200-14E / A200-180 / A200-18T / A200-19I / A200-19K /
A200-19M / A200-1A9 / A200-1AA / A200-1AB / A200-1AE / A200-1Ai / A200-1BP / A200-1BW / A200-1CC /
A200-1CR / A200-1DA / A200-1DN / A200-1DQ / A200-1FJ / A200-1G6 / A200-1GD / A200-1HU / A200-1M7
/ A200-ST2041 / A200-ST2043 Toshiba Satellite A205 Series: A205 / A205-S4537 / A205-S4557 /
A205-S4567 / A205-S4577 / A205-S4578 / A205-S4587 / A205-S4597 / A205-S4607 / A205-S4617 / A205-
S4618 / A205-S4629 / A205-S4638 / A205-S4639 / A205-S4647 / A205-S4707 / A205-S4777 / A205-S4797 /
A205-S7456 / A205-SP4038 / A205-SP4068 Toshiba Satellite A215 Series: A215-S4697 / A215-S4717 /
A215- S4737 / A215-S4747 / A215-S4757 / A215-S4767 / A215-S4807 / A215-S4817 / A215-S48171 /
A215-S7407 / A215-S7408 / A215-S7414 / A215-S7418 / A215-S7421 / A215-S7422 / A215-S7427 /
A215-S7433 / A215 -S7437 / A215-S7444 / A215-S7447 / A215-S7462 / A215-SP401 Toshiba Satellite A85
Series: A80-S178 / A85-S107 / A85-S1071 / A85-S1072 / A85-SP107 / A85-SP1072 Toshiba Satellite L10
Series: L10-100 / L10-101 / L10-104 / L10-105 / L10-130 / L10-154 / L10-190 / L10-194 / L10-226 / L10-272 /
L10-SP104 Toshiba Satellite L15 Series: L15 / L15-S104 / L15-S1041 / L15 -SP104 / L15-SP1041 Toshiba
Satellite L20 Series: L20-101 / L20-112 / L20-118 / L20-120 / L20-121 / L20-135 / L20-155 / L20-157 /
L20-159 / L20-173 / L20-188 / L20-205 / L20-256 / L20-S310 / L20-S310TD / L20-SP119 / L20-SP131 /
L20-SP131 / L20-SP231 / P205-S6237 Toshiba Satellite L25 Series: L25 / L25-S119 / L25-S1192 / L25
-S1193 / L25-S1194 / L25-S1195 / L25-S1196 / L25-S121 / L25-S1212 / L25-S1213 / L25-S1215 / L25-
S1216 / L25-S1217 / L25-SP121 / L25-SP129 / L25-SP139 / L25-SP141 / L25-SP151 Toshiba Satellite L30
Series: L30 / L30-10P / L30-114 / L30-115 / L30-11E / L30-11H / L30-134 / L30-140 / L30-142 Toshiba
Satellite L35 Series: L35 / L35-S1054 / L35-S2151 / L35-S2161 / L35-S2171 / L35-S2174 / L35-S2194 /
L35-S2316 / L35-S2366 / L35-SP1011 / L35-SP2011 / L35-SP2031 / L35-SP2041 / L35-SP2051 /
L35-SP2071 / L35-SP4016 / L35-SP4068 / L35-SP4086 / L35- SP4096 / L35-SP4116 Toshiba Satellite L45
Series: L45-S2416 / L45-S4687 / L45-S7409 / L45-S7419 / L45-S7423 / L45-S7424 / L45-SP2036 /
L45-SP2046 / L45-SP2056 / L45-SP2066 / L45- SP4016 Toshiba Satellite M105 M115 Series: M105-S1011 /
M105-S1021 / M105-S1031 / M105-S1041 / M105-S10xx / M105-SP1011 / M105-SP1021 / M105-SP1031 /
M105-SP1041 / M115-S1061 / M115-S1064 / M115-S1071 / M115-S1074 Toshiba Satellite M200 M205
Series: M200-ST2002 / M205-S3207 / M205-S3217 / M205-S7452 / M205-S7453 Toshiba Satellite M30X
Series: M30X / M30X-1593 / M30X-214 / M30X-40 / M30X-60 / M30X-80 / M30X-S114 / M30X-S1592 /
M30X-S1593 / M30X-S171 / M30X-S181 / M30X- S191 / M30X-S214 / M30X-S221 / M30X-s234 /
M30X-SP111 / M30X-SP114 Toshiba Satellite M35X Series: M35X / M35X-114 / M35X-149 / M35X-S109 /
M35X-S111 / M35X-S114 / M35X-S1141 / M35X-S1142 / M35X-S1143 / M35X-S149 / M35X-S1491 /
M35X-S1492 / M35X-S161 / M35X-S1611 / M35X-S163 / M35X-S1631 / M35X-S309 / M35X-S3091 / M35X-
S311 / M35X-S3111 / M35X-S3112 / M35X-S329 / M35X-S3291 / M35X-S349 / M35X-S3491 / M35X-SP111
/ M35X-SP114 / M35X-SP161 / M35X-SP171 / M35X-SP181 / M35X-SP311 / M35X-SP349 Toshiba Satellite
M40 M45 Series: M40-S312TD / M45-S165 / M45- S1651 / M45-S165X / M45-S169 / M45-S1691 Toshiba
Satellite M55 Series: M55-S1001 / M55-S139 / M55-S1391 / M55-S139X / M55-S141 Toshiba Satellite M60
M65 Series: M60-S811 / M60-S8112 / M60- S9093 / M65-S809 / M65-S8091 / M65-S8092 / M65-S821 /
M65-S8211 / M65-S9062 / M65-S9063 / M65- S9064 / M65-S9065 / M65-S909 / M65-S9091 / M65-S9092 /
M65-SP811 / M65-SP959 Toshiba Satellite P205 Series: P205D-S7429 / P205D-S7438 / P205D-S7439 /
P205D-S7454 / P205-S6237 / P205-S6247 / P205-S6257 / P205-S6267 / P205-S6287 / P205 -S6297 /
P205-S6298 / P205-S6307 / P205-S6337 / P205-S6347 / P205-S6348 / P205-S7469 Toshiba Satellite U305
Series: U305 / U305-S5077 / U305-S5087 / U305-S5097 / U305-S5107 / U305-S5117 / U305-S5127 /
U305-S7432 / U305-S7446 / U305-S7448 / U305- S7467 / U305-S7477 / U305-SP5017 / U305-SP5028 /

U305-SP5037 Toshiba Tecra L2 Series: L2-S011 / L2-S022 Toshiba Satellite 1000 1100 1130 1200 Series: 1000-S157 / 1000 -S158 / 1005-S157 / 1005-S158 / 1100-S101 / 1110-S153 / 1110-SP153 / 1115-S103 / 1115-S107 / 1115 -S123 / 1115-SP153 / 1130-S155 / 1130-S156 / 1135-S125 / 1135-S155 / 1135-S1551 / 1135-S1552 / 1135-S1553 / 1135-S1554 / 1135-S156 / 1200-S121 / 1200-S122 Toshiba Satellite 1600 1700 Series: 1605CDS / 1625CDT / 1675CDS / 1695CDT / 1715XCDS / 1730-S101 / 1735-S101 / 1750-S202 / 1755-S202 55-S202 Toshiba Satellite 3000 Series: 3000-S304 / 3000-S307 / 3000- S353 / 3005-S303 / 3005-S304 / 3005-S307 / 3005-S308 / 3005-S403

Â

[Ð°Ð½Ñ, Ð¼Ñ€Ð¼Ð°Ñ†Ð¼, Ñ• Ð¼ Ð¼Ñ€Ð¼Ð°Ð°Ð°Ñ†Ð¼](#)

ÐœÐ½Ð¼Ð½Ð¼, Ñ• Ð¼ Ð¼¼Ð°Ð°Ñ†Ð¼ Ð¼Ñ, Ð¼Ð»Ð¼Ð½Ð¼Ð½Ð¼, Ð¼ Ð¼¼Ð± Ñ•Ñ, Ð¼¼Ð¼ Ñ, Ð¼¼Ð²Ð°Ñ€Ð°Ñ€Ð¼.

ÐŸÐ¼Ð¶Ð°Ð°Ñ†Ð¼Ñ†Ñ•Ñ, Ð° Ð¼¼Ð°Ð°Ð°Ð°Ñ†Ð¼, Ñ†Ñ, Ð¼¼Ð±Ñ† Ð¼¼Ñ•Ñ, Ð°Ð°Ð¼, Ñ•Ð²Ð¼ Ð¼¼Ð½Ð¼Ð½Ð¼.